



GETTING TO KNOW YOUR **2021** **CORVETTE**



chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Corvette. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.chevrolet.com.

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Power Folding Mirror↕/Window Controls

Manual Shift Paddles

Turn Signal Lever/Exterior Lamps Control

Customizable Instrument Cluster

Windshield Wipers Lever



Head-Up Display Controls↕

Hood Release/Trunk Release Buttons

Cruise Control/Z-Mode Buttons

Electric Parking Brake Switch

Audio Favorite Station Buttons

Steering Wheel Adjustment Control

Audio Volume Buttons

Driver Information Center/Heated Steering Wheel↕/Voice Recognition Control Buttons

SYMBOLS



Stability Control Off



Low Tire Pressure

BRAKE Brake System



Antilock Brake System



Stability Control Active



Door Ajar



Cruise Control

PARK Electric Parking Brake



Charging System



Oil Pressure



Engine Coolant Temperature



Service Electric Parking Brake



Traction Control Off



Low Fuel

Engine
Start/Stop
Button

NFC Bluetooth
Pairing Hotspot

Infotainment
System
Touchscreen

Performance Data Recorder
SD Card Slot*
(in glove box)

Glove Box
Button



Transmission
Shift Controls

Traction Control &
StabiliTrak Off/Front
Lift System*/Curb View
Camera* Buttons

Driver Mode
Control

Climate Controls/
Heated & Ventilated
Seat* Controls

Accessory
Power Outlet



Transmission Temperature



Airbag Readiness



Check Engine



Driver Seat Belt Reminder



Front Lift System



Passenger Seat
Belt Reminder



Security



Lamps On
Reminder

Read your Owner's Manual to learn about the information being relayed by the lights and gauges of the instrument cluster.

See Introduction in your Owner's Manual.

* Optional equipment

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

Lock

Press to lock all doors and the fuel door. Press again to fold the power mirrors[◆].

Unlock

Press to unlock the driver's door and the fuel door only or all doors, based on vehicle settings. Press and hold for 3 seconds to open all windows.

To enable automatic mirror folding[◆] when using the Lock and Unlock buttons, go to Settings > Vehicle > Comfort and Convenience > Remote Mirror Folding.

Remote Vehicle Start

Press twice to start the engine from outside the vehicle. The turn signal lamps will flash. After entering the vehicle, turn on the ignition.

Hood Release

Press and release followed by press and hold to open the hood.



Note: To change or enable some Remote Keyless Entry settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.





Hatch/Trunk Release

Press and release followed by press and hold to open the hatch/trunk.

Lower Convertible Top[◆]

Press and release the  Unlock button and then press and hold the  button to lower the top.

Press and release the  Lock button and then press and hold the  button to open the engine compartment.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The horn sounds and lights flash 3 times.

Press and hold to activate the alarm. Press again to cancel the alarm.

KEY RELEASE

If vehicle power is lost, press the button on the side of the transmitter to pull out the key. Use the key to open the door. Pull the looped cord below the instrument panel to open the hood for access to the battery.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM


The system enables operation of the doors, hatch/trunk, and hood without removing the Remote Keyless Entry (RKE) transmitter from your pocket or purse. The transmitter must be within 3 feet of the hatch/trunk, hood or door being unlocked.

KEYLESS UNLOCKING

With the RKE transmitter within range:

- ▶ Press the driver's door handle touchpad (A) to unlock the driver's door only or all doors.
- ▶ Press the passenger's door handle touchpad to unlock all doors.

KEYLESS LOCKING

- ▶ Press the  Lock button on the RKE transmitter or interior door panel to lock all doors.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay once all doors are closed.





KEYLESS ACCESS SYSTEM

PASSIVE LOCKING

- ▶ To have all doors lock automatically after a short delay when the ignition is off, the RKE transmitter is removed from the vehicle, and all doors are closed, go to Settings > Vehicle > Remote Lock, Unlock, Start > Passive Door Lock.
- ▶ To have the driver's door or all doors unlock when using the touchpad on the driver's door handle, go to Settings > Vehicle > Remote Lock, Unlock, Start > Passive Door Unlock.

HATCH/TRUNK ACCESS



The vehicle must be in Park.

- ▶ Press and release followed by press and hold the  button on the RKE transmitter, press and hold the  button on the driver's door, or press the touchpad (B) above the license plate with the vehicle unlocked or, if locked, with the RKE transmitter within range.
- ▶ When closing the hatch/trunk, set the decklid into the power latch. The latch will close automatically.



HOOD ACCESS

The vehicle must be in Park.

- ▶ Press and release followed by press and hold the  button on the RKE transmitter, press and hold the  button on the driver's door, or press the touchpad (C) in the driver-side grille opening below the headlamp.
- ▶ When closing the hood, set the hood striker into the latch and then press on the front edge of the hood until the latch clicks twice. **Never drive without the hood fully closed.**



AUXILIARY DOOR RELEASES

If the vehicle battery is weak or disconnected, the doors can be opened manually.

- ▶ From inside the vehicle, pull the driver's or passenger's door release handle (D) on the floor near each door opening.
- ▶ From outside the vehicle, use the mechanical key from the RKE transmitter in the key cylinder, located rearward of the driver's door handle in the air inlet (E), to open the driver's door, or in the key cylinder behind the license plate to open the hatch/trunk.



See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE/ON

- ▶ With the transmission in Park, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.

Note: If the Remote Keyless Entry transmitter battery is weak, place the transmitter in the rear cupholder in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode to operate the radio, windows and other accessories. The amber button indicator will illuminate.

See Driving and Operating in your Owner's Manual.

BATTERY TIPS

BATTERY LOCATION

The battery is located under a cover in the underhood compartment. To access the battery, remove the left and right side shields first before removing the cover assembly.

BATTERY CHARGER◆

If the vehicle is not driven weekly, or the battery is disconnected or drained, use the optional battery maintainer to charge the battery. To operate the battery maintainer, plug it into a standard electrical outlet and into the vehicle's underhood accessory power outlet.

See Vehicle Care in your Owner's Manual.

WINDOW PROGRAMMING

To provide a tight seal, window indexing automatically lowers the window slightly when the door is opened and then automatically raises the window when the door is closed.

If battery power is disconnected, program the power windows:

1. Close all doors and start the vehicle.
2. Partially open the window to be programmed and then fully close the window. Continue to hold up the window switch briefly after the window has closed.
3. Fully open the window. Continue to hold down the window switch briefly after the window has opened.

Note: The power windows' express-close feature and the power convertible top◆ will not operate until the windows are programmed.

See Keys, Doors and Windows in your Owner's Manual.

POWER SEATS

SEAT ADJUSTMENTS

A. Seat Cushion Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar/Side Bolster Adjustment[◆]

Press the round control forward or rearward to adjust the lumbar support and up or down to adjust the side bolsters.



SET DRIVER'S SEAT MEMORY POSITIONS[◆]

1. With the vehicle On and in Park, adjust the driver's seat, power outside mirrors, and power steering column[◆] to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2. To identify each Remote Keyless Entry transmitter, one has a chrome flag and the other has a black flag.



To store seat and power steering column positions for more clearance when exiting the vehicle, repeat these steps using the  **EXIT** button instead of button 1 or 2.

RECALL DRIVER'S SEAT MEMORY POSITIONS[◆]


- ▶ Press and hold button 1, 2 or  **EXIT** until the set position is reached.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

- ▶ To set the automatic recall options, go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

SET PASSENGER'S SEAT MEMORY POSITIONS[◆]

1. With the vehicle On and in Park, adjust the passenger's seat to the desired position.
2. Press and release the **SET** button on the passenger's door. A beep will sound.
3. Immediately press and hold button 1 or 2 until two beeps sound.

To store a seat position for more clearance when exiting the vehicle, repeat these steps using the  **EXIT** button instead of button 1 or 2.

- ▶ To recall a setting, press and hold button 1, 2 or  **EXIT** until the set position is reached.

See Seats and Restraints in your Owner's Manual.

LIGHTING

EXTERIOR LAMPS

Rotate the band to operate the exterior lamps.

 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

INTERIOR LIGHTING

 **Instrument Brightness Control**

Rotate the knob to brighten or dim the instrument panel lighting during nighttime use.

ENGINE COMPARTMENT LAMPS

The engine compartment lamps will turn on briefly when any door is unlocked or opened, or when the engine compartment is opened.

The lamps will turn off when all doors and the engine compartment are closed, the doors are locked, the vehicle begins to move after shifting out of Park, or the ignition is turned On.



See Lighting in your Owner's Manual.

WINDSHIELD WIPERS

Move the lever up/down to activate the wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single wipe

 **Washer Fluid**


Pull the lever to spray washer fluid on the windshield.



See Instruments and Controls in your Owner's Manual.


INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.

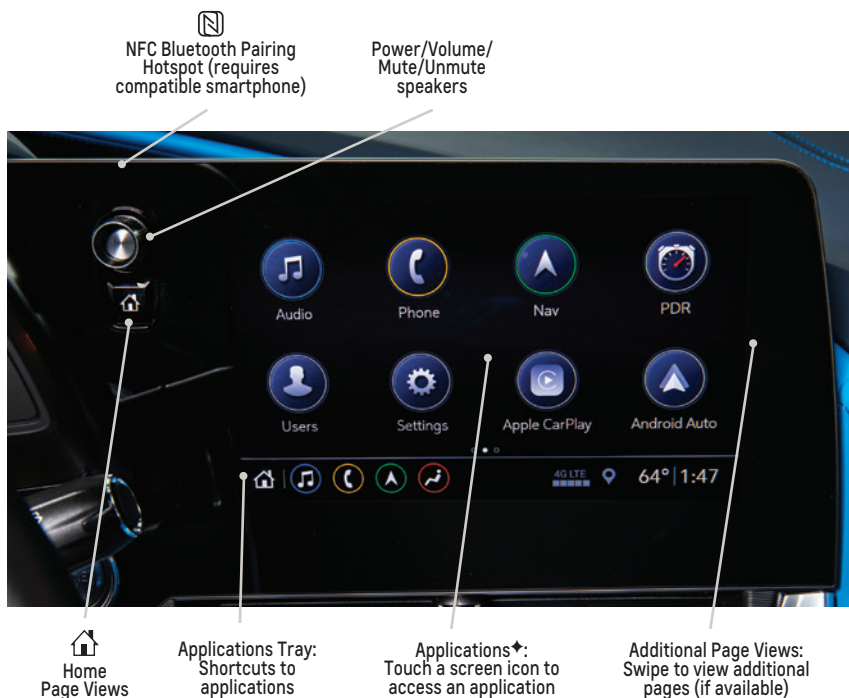

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touchscreen, such as tap, drag and swipe, to interact with the system. For assistance, call 1-855-478-7767 or visit my.chevrolet.com/how-to-support.

MANAGING HOME PAGE ICONS

1. Press the  **Home** button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

See *Infotainment System* in your Owner's Manual.


STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[◆]) can be stored in any order. The audio source options are on the left side of the audio screen.

1. Display the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.

VOICE RECOGNITION


Control the music source, enter a navigation destination[◆], make phone calls hands-free (after pairing your Bluetooth-enabled phone), and perform other tasks using the natural voice recognition system.

1. Push the  **Push to Talk** button on the steering wheel.
2. The system will play a prompt.
3. After the prompt, say what you want it to do using natural speech.

Examples: "Call Dave" or "Tune to 99.5 FM." Say "Help" for assistance.



BLUETOOTH VOICE RECOGNITION

Bluetooth voice recognition allows access to the voice recognition commands on a paired, compatible mobile phone; e.g. Siri or Google Assistant.

- ▶ To activate Bluetooth Voice Recognition, press and hold the  **Push to Talk** button for a few seconds.

APPLE CARPLAY AND ANDROID AUTO

Apple CarPlay or Android Auto capability is available through a compatible smartphone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible smartphone from the Google Play Store. No app is required for Apple CarPlay.
2. There are two ways to set up device projection:
 - **Wireless Connection** – Connect your smartphone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - **Wired Connection** – Connect your smartphone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
3. Follow the instructions on the infotainment system and the smartphone.
4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
 - ▶ To automatically launch Apple CarPlay or Android Auto when a Bluetooth-paired phone is connected, select Phone icon > Phones >  Information. Turn Apple CarPlay or Android Auto on or off.
 - ▶ To exit Apple CarPlay or Android Auto, press the  **Home** button. To return to Apple CarPlay or Android Auto, press and hold the **Home** button.

See *Infotainment System in your Owner's Manual*.

INFOTAINMENT SYSTEM

IN-VEHICLE APPS*

Connected apps are available for download to the infotainment system through the Apps icon on the Home page. Downloading and using the apps requires internet connectivity, and may require a data plan. For more information, visit my.chevrolet.com/how-to-support.

PORTABLE AUDIO DEVICES

An iPod®, iPhone®, MP3 Player, or a USB flash drive can be connected to the USB data ports in the center console storage compartment.

- ▶ To play a device, touch Audio on the infotainment screen and then touch USB from the sources list or touch More to view the USB option.




See *Infotainment System* in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.


Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions. Visit my.chevrolet.com/how-to-support for more information.

PAIR A PHONE


1. To use voice recognition, press the  **Push to Talk** button; after the prompt, say "Pair phone." To use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. From your phone's Bluetooth settings, select the name on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- ▶ To set the first and secondary phones, go to Settings > System > Phones and select the  Information icon.

NFC PAIRING

1. To use Near Field Communication (NFC) pairing, unlock your smartphone and enable NFC. Check your smartphone user's information for NFC compatibility.
2. Hold the phone next to the  NFC icon above the infotainment screen.
3. After pairing is initiated, follow the pairing instructions.



See *Infotainment System* in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Bluetooth Voice Recognition (Siri or Google Assistant) on a paired, compatible mobile phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

Radio Station Seek

With the Audio menu displayed in the Driver Information Center, rotate the thumbwheel to seek the next or previous radio station.

Volume

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station

Press the top or bottom button to go to the next or previous favorite radio station or track.



See *Infotainment System* in your Owner's Manual.

WIRELESS PHONE CHARGING*

The Wireless Charging system for smartphones is located between the driver's and passenger's seatbacks. Visit my.chevrolet.com/how-to-support to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pocket.
3. Place the smartphone, screen facing out, in the pocket.
4. The ⚡ battery charging symbol will appear on the infotainment screen when charging. If not charging, remove the device for 3 seconds and rotate it 180 degrees before placing it in the pocket again.




See *Instruments and Controls* in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

WI-FI HOTSPOT

With the vehicle's available 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

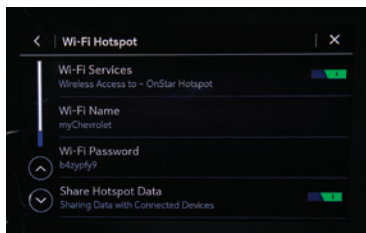

OVER-THE-AIR SOFTWARE UPDATES

The infotainment system can download and install vehicle software updates through the vehicle's 4G LTE Wi-Fi hotspot, if active, or a secured Wi-Fi hotspot. The system will prompt for certain updates to be downloaded and installed.

- ▶ To check updates manually, go to Settings > System > Vehicle Software > Updates. Follow the on-screen prompts.

Note: For more information on Wi-Fi use, system limitations, and software updates, visit my.chevrolet.com/how-to-support.

See *Infotainment System* in your Owner's Manual.

VALET MODE

Valet Mode can be used when it's desired that only an authorized user has access to personalized features on the infotainment screen, glovebox and center console storage compartment.


- ▶ To lock/unlock the infotainment screen, glove box and center console storage compartment, select Settings > Vehicle > Valet Mode and enter a passcode.
- ▶ To set the Performance Data Recorder* (PDR) to automatically record in Valet Mode, go to the PDR menu and select Settings > Automatic Recording > While in Valet Mode Only.

See *Instruments and Controls* in your Owner's Manual.

VEHICLE CUSTOMIZATION

Some vehicle features can be turned on/off or customized using the Settings menus and the infotainment screen buttons. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press < to exit each menu.

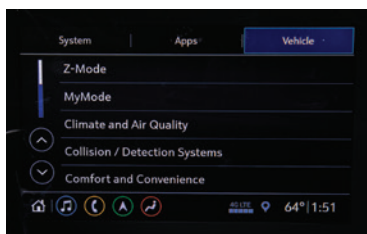


See *Instruments and Controls* in your Owner's Manual.

CLIMATE CONTROLS

CLIMATE CONTROL DISPLAY

- ▶ Select the Climate icon on the Home page of the infotainment screen to view the climate control display. Settings can be changed using the screen buttons or the controls on the center console.

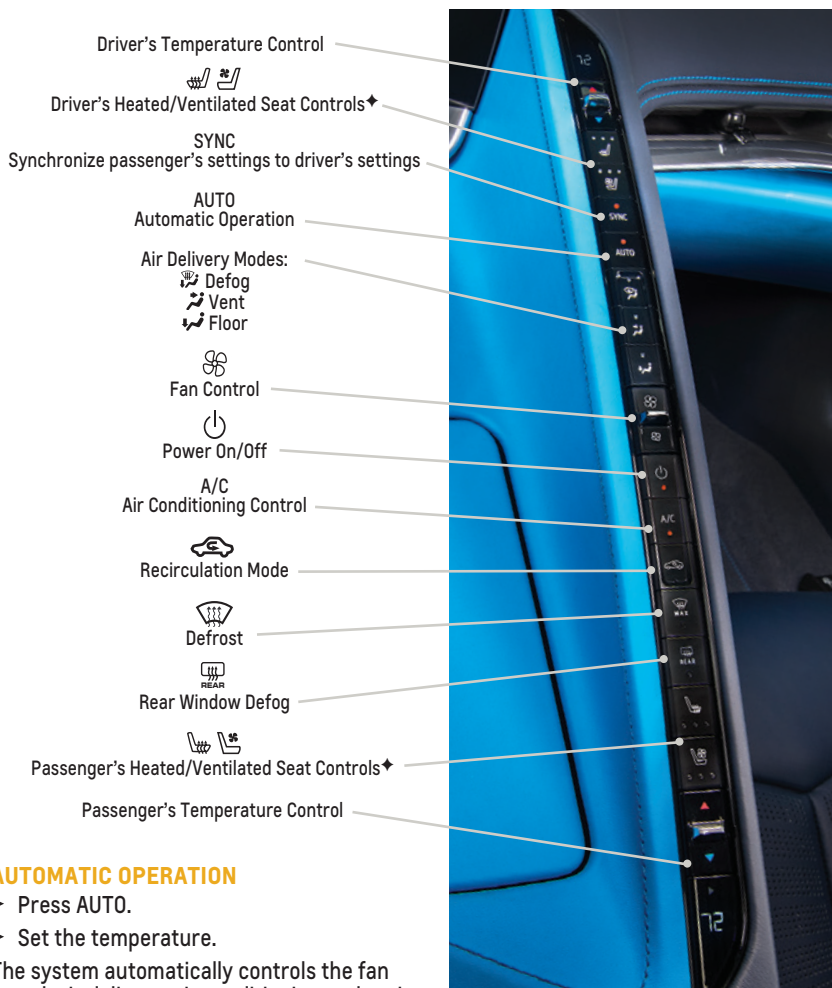

Driver's Temperature Control



Driver's Heated/Ventilated Seat Controls ◆

SYNC

Synchronize passenger's settings to driver's settings

AUTO

Automatic Operation

Air Delivery Modes:



Defog



Vent



Floor



Fan Control



Power On/Off



A/C
Air Conditioning Control



Recirculation Mode



Defrost



Rear Window Defog



Passenger's Heated/Ventilated Seat Controls ◆

Passenger's Temperature Control

AUTOMATIC OPERATION

- ▶ Press AUTO.
- ▶ Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature. If a function is manually adjusted, the Auto indicator turns off and automatic operation for that function is canceled.

See Climate Controls in your Owner's Manual.

COUPE ROOF PANEL

It may be necessary to have two people remove the roof panel. Refer to your Owner's Manual for complete instructions.

- ▶ The roof panel is secured with two front levers and one rear lever. To unlock the roof panel, pull the two front levers outward and then press the button on the front of the rear lever and pull the lever down.
- ▶ When removed, secure the roof panel with the interior facing forward and the rear pins in the lower receivers on the rear storage compartment floor. Push each front corner of the panel forward until it clicks into the upper receivers. If not properly secured, damage to the panel may occur.
- ▶ During roof panel installation, install the rear edge of the panel first.





Note: A Corvette Accessory Roof Panel Storage Bag[◆] is available to protect the panel when not installed on the vehicle.

See Keys, Doors and Windows in your Owner's Manual.



CONVERTIBLE TOP OPERATION[◆]

Before operating the power convertible top, ensure that the roof and tonneau cover are clear of any objects and that the trunk is closed. When possible, operate the convertible top when the vehicle is stopped. If necessary, the top can be operated at vehicle speeds up to 30 mph.

POWER TOP OPERATION



1. Start the vehicle.
2. Press and hold down the  **Convertible Top** button (A) on the driver's door to lower the top; pull and hold up the  button to raise the top. The windows will lower automatically.
3. A chime will sound when the top is completely lowered or raised.

The top also may be opened using the Remote Keyless Entry transmitter.

- ▶ Press and release the  **Unlock** button and then press and hold the  **Convertible Top** button to lower the top.

Note: After a loss of vehicle power, program the power windows in order to operate the convertible top.

REAR WINDOW OPERATION

- ▶ Press the  **Rear Window** button (B) on the driver's door to lower the rear window. To help deflect the wind, the rear window will not lower completely. Pull the  button to raise the rear window. The window can be lowered with the convertible top up or down.



See Keys, Doors and Windows in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ONSTAR® ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security Plan, push the blue **OnStar** button or red **Emergency** button to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, push the blue OnStar button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at my.chevrolet.com.

We recommend always using ACDelco or GM Genuine Parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2021 General Motors. All rights reserved.



84363623 B